

# Ethernet controller TCW121

## User manual



### 1. Short description

**TCW121** is a multifunctional device for remote monitoring and management. It is an Ethernet based controller, which is designed to work in IP-based networks and managed by WEB interface or SNMP programs. Its I/O interface - relay outputs, analog and digital inputs, is suitable for solving specific problems in various fields such as remote control, alarm systems, industrial process automation, control and management of computer networks etc.

### 2. Features


- 10 Mb Ethernet connectivity;
- Password protected web based configuration and control;
- 2 digital inputs with "logic level" and "dry contact" modes;
- 2 analog inputs with switchable range - 0 ÷ 5 VDC or 0 ÷ 100 VDC;
- 2 relays with NO and NC contacts;
- Long 1-Wire support, for up to 2 temperature sensors TST1XX or up to 2 temperature/humidity sensors TSH2xx;
- Temperature & humidity monitoring and control;
- SNMP v.1 and VLAN support;
- SMTP with authorization (SSL is not supported);
- Sending SNMP Traps messages under certain conditions;
- Sending E-mail messages under certain conditions;
- MAC Address filtering;
- Remote FTP firmware update.

### 3. Technical parameters

|  |                 |
|--|-----------------|
| Supply voltage, VDC                                      | 12±2            |
| Maximum current ( with both relays ON), mA               | 170             |
| Weight, g  | 65              |
| Dimensions, mm   | 84 x 68 x 18    |
| Operating temperature, °C                                | 0 ÷ 40          |
| Minimum high level input voltage for digital inputs, VDC | 2.5             |
| Maximum low level input voltage for digital inputs, VDC  | 0.8             |
| Maximum input voltage for digital inputs, VDC            | 5.5             |
| Analog input 1 range (hardware configurable), VDC        | 0 ÷ 5 / 0 ÷ 100 |
| Analog input 2 range (hardware configurable), VDC        | 0 ÷ 5 / 0 ÷ 100 |
| Maximum switchable current (at 220 VAC) , A              | 1               |
| Maximum switchable voltage, VAC/VDC                      | 250/110         |

### 4. Connectors

Inputs and outputs locations are shown below:

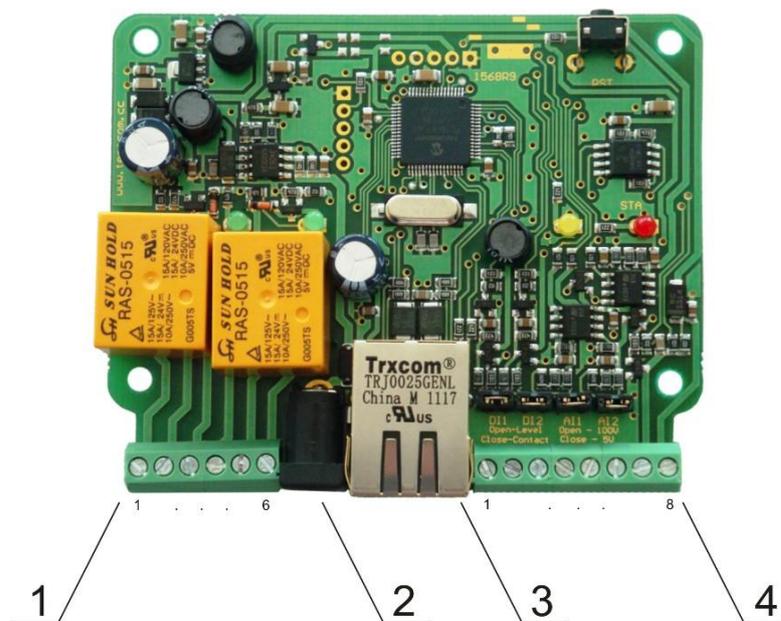

**Connector 1** – 6-pin connector pinout is shown in the table below:

| Pin | description            |
|-----|------------------------|
| 1   | Relay1 normally open   |
| 2   | Relay1 common          |
| 3   | Relay1 normally closed |
| 4   | Relay2 normally open   |
| 5   | Relay2 common          |
| 6   | Relay2 normally closed |

**Connector 2** – power connector (center positive).

**Connector 3** – RJ45 Ethernet connector

**Connector 4** – 8-pin connector pinout is shown in the table below:

| Pin | description   |
|-----|---|
| 1   | Digital input 1 ( <b>Din1</b> ). Operating mode is selected by jumper DI1- dry contact (close) and logic level (open).  |
| 2   | Digital input 2 ( <b>Din2</b> ). Operating mode is selected by jumper DI2 - dry contact (close) and logic level (open). |
| 3   | GND   |
| 4   | Analog input 1 ( <b>Ain1</b> ). Range is selected by jumper AI1 – 0 ÷ 5VDC (close) and 0 ÷ 100VDC (open).               |
| 5   | Analog input 2 ( <b>Ain2</b> ). Range is selected by jumper AI2 – 0 ÷ 5VDC (close) and 0 ÷ 100VDC (open).               |
| 6   | GND   |
| 7   | 1-Wire data   |
| 8   | 1-Wire power supply (5VDC)  |

## 5. LED indicators


The following indicators show the status of the controller:

- **Relay1/Relay2** (green) – these LEDs are illuminated whenever the corresponding relay is activated (the NO contact is closed and the NC contact is open);
- **Sts** (red) – this flashes when the power supply is turned on;
- **Log** (yellow) – this LED indicates that someone is connected to the controller through the web interface;
- **Link** (green) – this LED is located on the Ethernet connector. It indicates that the device is connected to the network;
- **Act** (yellow) – this LED is located on the Ethernet connector. It flashes when activity is detected on the network.

## 6. Example Applications


### 6.1 Remote control

The controlled device is connected in series with the relay contacts. Users can operate **TCW121** using a web browser or SNMP application. Both relays are managed independently.

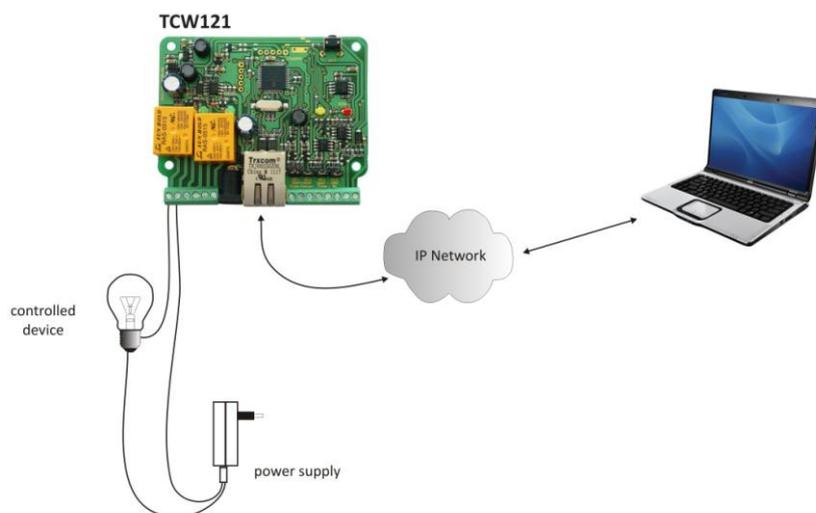


## 6.2 Remote monitoring

A relay contact of monitored device is connected to the digital input. When an event occurs – the controller can send an e-mail and/or SNMP trap.

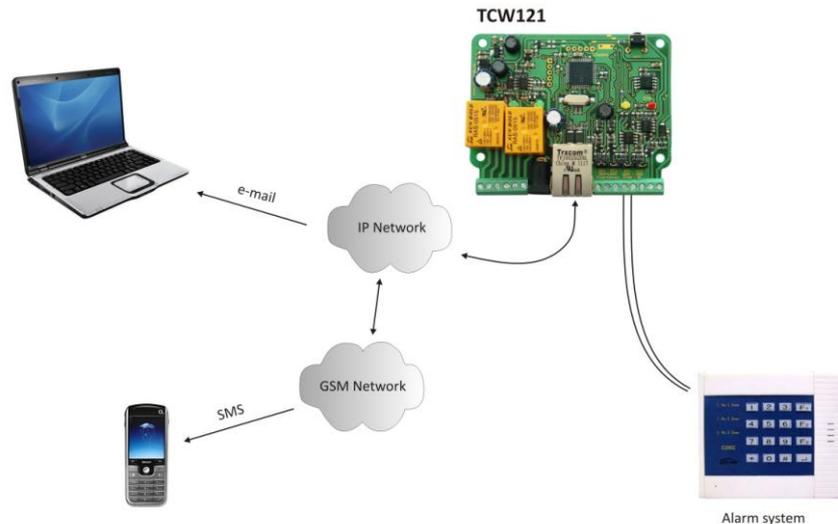

## 6.3 Data acquisition

The TCW121 can be used in Data Acquisition Systems (DAQ). The device uses SNMP v.1 protocol for communication with monitoring and management software applications.

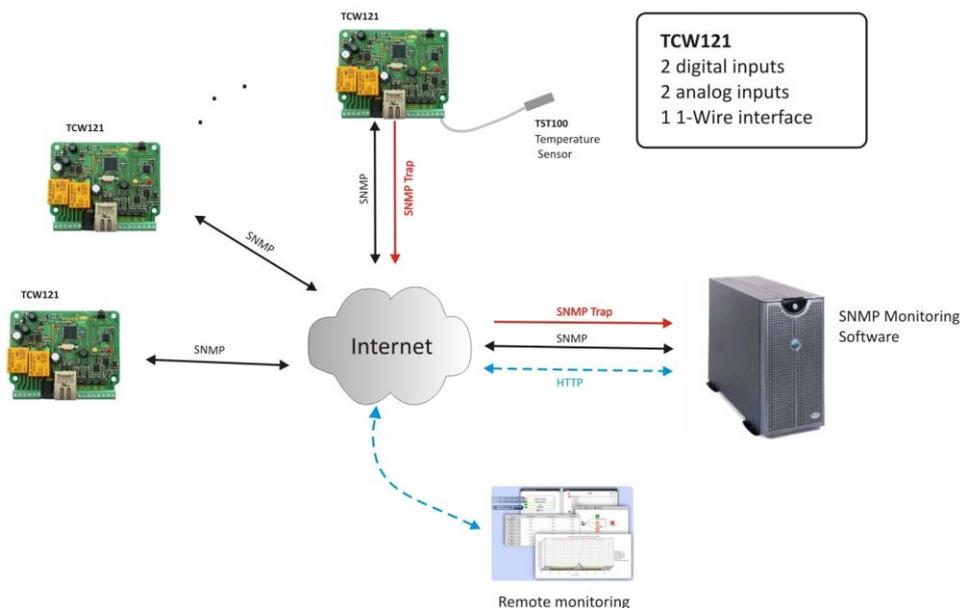

## 7. Installation


Please follow the steps below for proper installation :

1. Mount the controller in a dry and ventilated place.
2. Connect the Ethernet port to a 10/100MB Ethernet network. For direct connection to a PC use a "crossover" cable.
3. Connect the I/O pins of the controller according to the required application.
4. Connect the power supply.

If the red LED blinks, the power supply is OK. By default **TCW121** comes with the following network settings:

IP address: **192.168.1.2**, Subnet Mask: **255.255.255.0**, Default Gateway: **192.168.1.1**

Communication with **TCW121** can be established by assigning a temporary IP address to the computer. This address should be in the same network (for example 192.168.1.3). To get access to the web interface, you should type <http://192.168.1.2> into the browser.

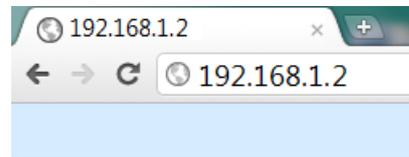

If the network settings are correct, the “Login” page will appear.

## 8. Web-based setup.

The web based interface allows configuration, monitoring and control. Recommended browser is Internet Explorer at 1024x768 resolutions.

### 8.1 Login page

After opening the Login page, authorization data must be entered (by default username=admin , password=admin). It is recommended to change the username and password to prevent unauthorized access to the controller.



The controller supports one active session – only one user can operate the device. If another user tries to login, the message “Someone’s logged in” appears:



The active session will be terminated automatically, if the current user stays inactive for 2 minutes.

## 8.2 Monitoring page

After successful authorization, the “Monitoring” page appears:

|                 |         |                                       |                                      |
|-----------------|---------|---------------------------------------|--------------------------------------|
| Digital Input 1 | ON      | Digital Input 2                       | ON                                   |
| Analog Input 1  | 2.9V    | Analog Input 2                        | 5.0V                                 |
| Temperature 1   | 25.1°C  | Temperature 2                         | ---                                  |
| Humidity 1      | 41.8%RH | Humidity 2                            | ---%RH                               |
| Relay output 1  | ON      | <input type="button" value="ON/OFF"/> | <input type="button" value="Pulse"/> |
| Relay output 2  | OFF     | <input type="button" value="ON/OFF"/> | <input type="button" value="Pulse"/> |

The “Monitoring” page provides information about the state of the relays and digital inputs, values of analog voltages (applied on analog inputs), temperature and humidity.

The state of the relay can be changed by appropriate “ON/OFF” button. To change the state of relay for a while “Pulse” button should be pressed. Duration of the pulse is specified in “Pulse Duration” field of “I/O Setup” page.

## 8.3 I/O setup page


I/O settings can be made here.

For temperature, humidity and analog value MIN, MAX and HISTERESYS values can be set. These values arranged windows for monitored parameter.

| Sensor 1        |                                     |                                   |                                   |   |   |
|-----------------|-------------------------------------|-----------------------------------|-----------------------------------|---|---|
|                 | Min.                                | Max.                              | Hysteresis                        | If out of range                           |   |
| Temperature, °C | <input type="text" value="28.5"/>   | <input type="text" value="32.5"/> | <input type="text" value="0.5"/>  | <input type="button" value="send_email"/> | <input type="button" value=""/>           |
| Humidity, %RH   | <input type="text" value="56.0"/>   | <input type="text" value="60.0"/> | <input type="text" value="1.0"/>  | <input type="button" value="send_email"/> | <input type="button" value=""/>           |
| Sensor 2        |                                     |                                   |                                   |   |   |
|                 | Min.                                | Max.                              | Hysteresis                        | If out of range                           |   |
| Temperature, °C | <input type="text" value="18.5"/>   | <input type="text" value="21.5"/> | <input type="text" value="0.1"/>  | <input type="button" value="send_email"/> | <input type="button" value=""/>           |
| Humidity, %RH   | <input type="text" value="50.0"/>   | <input type="text" value="55.0"/> | <input type="text" value="0.5"/>  | <input type="button" value="send_email"/> | <input type="button" value=""/>           |
| Analog inputs   |                                     |                                   |                                   |   |   |
|                 | Range                               | Min.                              | Max.                              | Hysteresis                                | If out of range                           |
| Input 1         | <input type="text" value="0-5V"/>   | <input type="text" value="2.2"/>  | <input type="text" value="2.8"/>  | <input type="text" value="0.1"/>          | <input type="button" value="send_email"/> |
| Input 2         | <input type="text" value="0-100V"/> | <input type="text" value="20.5"/> | <input type="text" value="30.0"/> | <input type="text" value="0.5"/>          | <input type="button" value="send_email"/> |

Every going out of range generates e-mail (if enabled). The subject of message is “Host name” defined in “Network setup” page. The body of message is description of parameter, generated e-mail. It is necessary to set SMTP server settings on "Network Setup" page, to successfully send e-mails.

Leaving range is considered when the parameter goes lower than MIN values or higher than MAX. Coming back in the range is consider when the parameter goes lower than (MAX – HISTERESYS) or higher than (MIN + HISTERESYS).

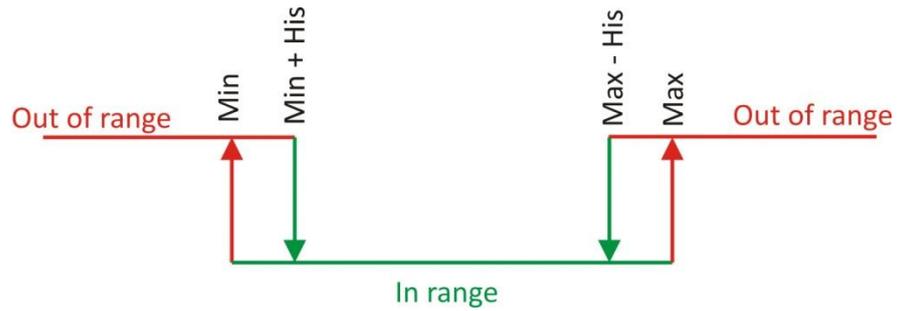

For analog input similar range can be set. It is mandatory that chosen range correspond with the range selection jumper J1 - 0÷5VDC (close) or 0÷100VDC (open).

For digital inputs, conditional e-mail sending can be arranged by following part of the page:

| Digital inputs |                    |
|----------------|--------------------|
| Input 1        | email_if_ON-TO-OFF |
| Input 2        | email_if_OFF-TO-ON |

Relays can be activated automatically depends of value of monitored parameter (humidity, temperature, analog voltage and changes on digital inputs) or manually. Only one parameter can be assigned for relay activation, at the same time:

| Relays                |              |
|-----------------------|--------------|
| Pulse Duration        | 2 sec(1-253) |
| Relay1 Activated from | manual       |
| Relay2 Activated from | manual       |

When manual activation is selected, “Pulse” and “ON/OFF” buttons on “Monitoring” page are active. The duration of pulse for relay activation can be set from 1 to 253 seconds.

For all monitored parameters only one e-mail recipients can be set.

| E-mail receipient |                       |
|-------------------|-----------------------|
| E-mail            | recipient_1@gmail.com |

Automatic monitoring page refresh interval can be set from 1 to 253 second. If 0 is chosen - no automatic refresh. Default value is 10 seconds.


| Monitoring page automatic refresh   |                 |
|-------------------------------------|-----------------|
| Interval                            | 30 sec(0 - 253) |
| <input type="button" value="Save"/> |                 |

## 8.5 Network Setup page

The Network parameters are set on this page.

For “IP configuration” and “MAC address” section, following parameters can be changed:

- **IP configuration** – IP Address can be static or dynamic (DHCP server should be present in the network);
- **IP address, Subnet mask , Default gateway** – these fields are active if IP address is static;
- **DNS** – these fields is mandatory, if domain names are used instead of IP addresses. By default DNS has the same Ip address as Default gateway;
- **Time Server** and **Time Zone** – these fields are not mandatory, they are used when e-mail must be sent;
- **Host Name** – up to 16 symbols, it appears as a “Subject” in sent e-mails;
- **MAC** – device MAC address.

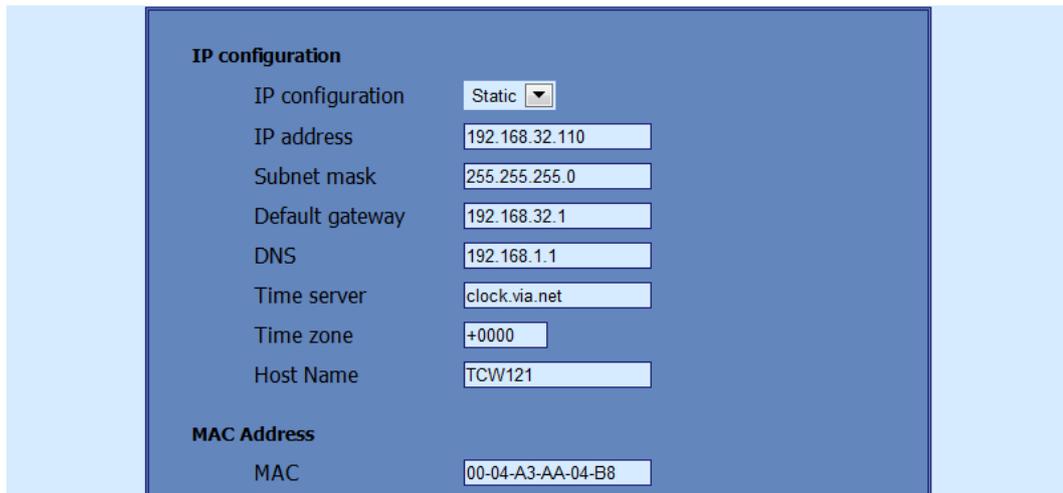

The screenshot shows the Network Setup page with the following fields:

| IP configuration |                |
|------------------|----------------|
| IP configuration | Static         |
| IP address       | 192.168.32.110 |
| Subnet mask      | 255.255.255.0  |
| Default gateway  | 192.168.32.1   |
| DNS              | 192.168.1.1    |
| Time server      | clock.via.net  |
| Time zone        | +0000          |
| Host Name        | TCW121         |


  

| MAC Address |                   |
|-------------|-------------------|
| MAC         | 00-04-A3-AA-04-B8 |

The good practice is to change the default IP address of controller immediately after first power-on. This will avoid collisions if many devices are used in the same network. It may be necessary to clear the arp cache, each time you connect a new device to the network. This is done by typing `arp -d` in the command prompt window of computer.

VLAN and MAC address filtering are supported. Up to 3 MAC addresses (including Default Gateway) can be active in MAC filtering.

**Attention!** If you are not familiar with VLAN and MAC filtering leave these sections by default.

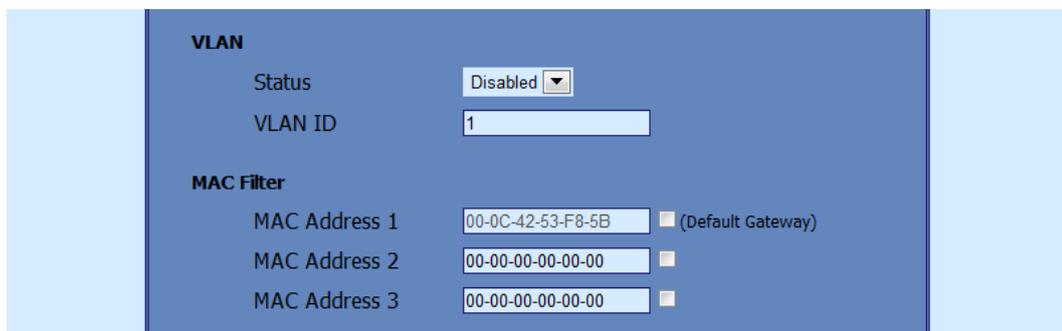

The screenshot shows the Network Setup page with the following fields:

| VLAN    |          |
|---------|----------|
| Status  | Disabled |
| VLAN ID | 1        |

| MAC Filter    |   |
|---------------|---|
| MAC Address 1 | 00-0C-42-53-F8-5B <input checked="" type="checkbox"/> (Default Gateway) |
| MAC Address 2 | 00-00-00-00-00-00 <input type="checkbox"/>                              |
| MAC Address 3 | 00-00-00-00-00-00 <input type="checkbox"/>                              |

To set up the SMTP server details, the following fields should be completed:

- **Mail server [IP:port]** – domain or IP address and port of SMTP mail server;
- **E-mail** – sender e-mail;
- **Username** and **Password** – authentication details for mail server.

Mail server is considered server for sending mails. Secure Socket Layer is not supported.

**SMTP**

Mailserv [IP:port]  :

Sender e-mail

Username

Password

Authentication details for WEB access to **TCW121** can be set in the last section. Only one user is supported.

**Web Access**

Username

Password

## 8.6 SNMP Setup page

**TCW121** supports SNMP v.1. This enables the device to be part of large monitoring and control networks. The possible settings for “SNMP” section are:

- **SNMP Configuration** – enable/disable SNMP;
- **Read-Write community** – performs client authentication;
- **Read-Only community** – performs client authentication;
- **SNMP Traps** – enable/disable SNMP trap messages;
- **IP address** – IP address of the receiving host
- **Community string** – performs client authentication
- **Trap Interval** - time interval in seconds for SNMP trap messages;
- **Max. Traps number** – maximum number of SNMP trap messages sent, if trap condition is present

**SNMP Setup**

**SNMP**

SNMP Configuration

Write community

Read community

**SNMP Traps**

SNMP Traps

IP address

Community string

Trap Interval

Max. Trap number

SNMP traps are sent if:

- event occurs (status change) on Digital Input 1 or Digital Input 2;
- measured voltage on Analog Input 1 or Analog Input 2 goes outside the range;

- measured temperature goes outside the range;
- measured humidity goes outside the range;
- restart condition.

## 9. SNMP setup

TCW121 can be configured and monitored through SNMP (Simple Network Management Protocol). This could be done using every SNMP v.1 compatible program. Parameters that can be changed, are grouped according to their functions in the tables below. To obtain a valid OID number it is necessary to replace the "x" symbol with the "1.3.6.1.4.1.38783". To save the changes **configurationSaved** (OID x.3.13.0) should be set to "1".

### 9.1 Product

| OID     | Name    | Access    | Description      | Syntax |
|---------|---------|-----------|------------------|--------|
| x.1.1.0 | name    | read-only | Device name      | String |
| x.1.2.0 | version | read-only | Firmware version | String |
| x.1.3.0 | date    | read-only | Release date     | String |

### 9.2 Setup -> network

| OID       | Name             | Access     | Description                | Syntax                    |
|-----------|------------------|------------|----------------------------|---------------------------|
| x.2.1.1.0 | deviceIPAddress  | read-write | Device IP address          | IpAddress                 |
| x.2.1.2.0 | subnetMask       | read-write | Subnet Mask                | IpAddress                 |
| x.2.1.3.0 | gateway          | read-write | Gateway                    | IpAddress                 |
| x.2.1.4.0 | deviceMACAddress | read-write | Device MAC Address         | OCTET STRING (SIZE(6))    |
| x.2.1.5.0 | dhcpConfig       | read-write | DHCP configuration ON/OFF  | INTEGER { ON(1), OFF(0) } |
| x.2.1.6.0 | DNS              | read-write | Domain Name Server address | IpAddress                 |
| x.2.1.7.0 | Hostname         | read-write | Device hostname            | String (SIZE (0..38))     |

### 9.3 Setup -> VLAN

| OID       | Name       | Access     | Description                  | Syntax                              |
|-----------|------------|------------|------------------------------|-------------------------------------|
| x.2.2.1.0 | VLANStatus | read-write | VLAN status ENABLED/DISABLED | INTEGER { ENABLED(1), DISABLED(0) } |
| x.2.2.2.0 | VlanId     | read-write | VLAN ID (0 – 4095)           | INTEGER (0..4095)                   |

### 9.4 Setup -> macFilter

| OID       | Name              | Access     | Description                   | Syntax                              |
|-----------|-------------------|------------|-------------------------------|-------------------------------------|
| x.2.3.1.0 | filterMACAddress1 | read-only  | MAC Filter 1                  | OCTET STRING (SIZE(6))              |
| x.2.3.2.0 | filterMACEnable1  | read-write | MAC Filter 1 ENABLED/DISABLED | INTEGER { ENABLED(1), DISABLED(0) } |
| x.2.3.3.0 | filterMACAddress2 | read-write | MAC Filter 2                  | OCTET STRING (SIZE(6))              |
| x.2.3.4.0 | filterMACEnable2  | read-write | MAC Filter 2 ENABLED/DISABLED | INTEGER { ENABLED(1), DISABLED(0) } |
| x.2.3.5.0 | filterMACAddress3 | read-write | MAC Filter 3                  | OCTET STRING (SIZE(6))              |
| x.2.3.6.0 | filterMACEnable3  | read-write | MAC Filter 3 ENABLED/DISABLED | INTEGER { ENABLED(1), DISABLED(0) } |

### 9.5 Setup -> SNMP

| OID       | Name                  | Access     | Description                    | Syntax                              |
|-----------|-----------------------|------------|--------------------------------|-------------------------------------|
| x.2.4.1.0 | SNMPConfiguration     | read-write | SNMP Configuration             | INTEGER { ENABLED(1), DISABLED(0) } |
| x.2.4.2.0 | trapEnabled           | read-write | TRAP messages ENABLED/DISABLED | INTEGER { Yes(1), No(0) }           |
| x.2.4.3.0 | trapReceiverIPAddress | read-write | TRAP receiver IP address       | IpAddress                           |
| x.2.4.4.0 | trapCommunity         | read-write | TRAP community                 | String (SIZE (0..13))               |
| x.2.4.5.0 | trapInterval          | read-write | TRAP messages interval         | INTEGER (0..255)                    |
| x.2.4.6.0 | maxNumberOfTraps      | read-write | Maximum number SNMP traps      | INTEGER (0..255)                    |

## 9.6 Setup -> sensor1 -> temperature1

| OID         | Name               | Access     | Description                     | Syntax                               |
|-------------|--------------------|------------|---------------------------------|--------------------------------------|
| x.2.5.1.1.0 | temperature1Min    | read-write | Temperature1 range (min. value) | INTEGER (-1000..2000)                |
| x.2.5.1.2.0 | temperature1Max    | read-write | Temperature1 range (max. value) | INTEGER (-1000..2000)                |
| x.2.5.1.3.0 | temperature1Hyst   | read-write | Hysteresis                      | INTEGER (-1000..2000)                |
| x.2.5.1.4.0 | temperature1Action | read-write | Temperature1 action             | INTEGER {SEND_MAIL(1),NO_ACTION(0) } |

## 9.7 Setup -> sensor1 -> humidity1

| OID         | Name            | Access     | Description                  | Syntax                               |
|-------------|-----------------|------------|------------------------------|--------------------------------------|
| x.2.5.2.1.0 | humidity1Min    | read-write | Humidity1 range (min. value) | INTEGER (-1000..2000)                |
| x.2.5.2.2.0 | humidity1Max    | read-write | Humidity1 range (max. value) | INTEGER (-1000..2000)                |
| x.2.5.2.3.0 | humidity1Hyst   | read-write | Hysteresis                   | INTEGER (-1000..2000)                |
| x.2.5.2.4.0 | humidity1Action | read-write | Temperature1 action          | INTEGER {SEND_MAIL(1),NO_ACTION(0) } |

## 9.8 Setup -> sensor2 -> temperature2

| OID         | Name               | Access     | Description                     | Syntax                               |
|-------------|--------------------|------------|---------------------------------|--------------------------------------|
| x.2.6.1.1.0 | temperature2Min    | read-write | Temperature2 range (min. value) | INTEGER (-1000..2000)                |
| x.2.6.1.2.0 | temperature2Max    | read-write | Temperature2 range (max. value) | INTEGER (-1000..2000)                |
| x.2.6.1.3.0 | temperature2Hyst   | read-write | Hysteresis                      | INTEGER (-1000..2000)                |
| x.2.6.1.4.0 | temperature2Action | read-write | Temperature2 action             | INTEGER {SEND_MAIL(1),NO_ACTION(0) } |

## 9.9 Setup -> sensor2 -> humidity2

| OID         | Name            | Access     | Description                  | Syntax                               |
|-------------|-----------------|------------|------------------------------|--------------------------------------|
| x.2.6.2.1.0 | humidity2Min    | read-write | Humidity2 range (min. value) | INTEGER (-1000..2000)                |
| x.2.6.2.2.0 | humidity2Max    | read-write | Humidity2 range (max. value) | INTEGER (-1000..2000)                |
| x.2.6.2.3.0 | humidity2Hyst   | read-write | Hysteresis                   | INTEGER (-1000..2000)                |
| x.2.6.2.4.0 | humidity2Action | read-write | Temperature2 action          | INTEGER {SEND_MAIL(1),NO_ACTION(0) } |

## 9.10 Setup -> analogInput -> input1

| OID         | Name           | Access     | Description                       | Syntax                               |
|-------------|----------------|------------|-----------------------------------|--------------------------------------|
| x.2.7.1.1.0 | voltage1Min    | read-write | Voltage1 alarm range (min. value) | String (SIZE (0..6))                 |
| x.2.7.1.2.0 | voltage1Max    | read-write | Voltage1 alarm range (max. value) | String (SIZE (0..6))                 |
| x.2.7.1.3.0 | voltage1Hyst   | read-write | Voltage1 hysteresis               | String (SIZE (0..6))                 |
| x.2.7.1.4.0 | voltage1Action | read-write | Voltage1 action                   | INTEGER {SEND_MAIL(1),NO_ACTION(0) } |
| x.2.7.1.5.0 | voltage1Range  | read-write | Voltage1 input range              | INTEGER { 0_5V(0), 0_100V(1) }       |

## 9.11 Setup -> analogInput -> input2

| OID         | Name           | Access     | Description                       | Syntax                               |
|-------------|----------------|------------|-----------------------------------|--------------------------------------|
| x.2.7.2.1.0 | Voltage2Min    | read-write | Voltage2 alarm range (min. value) | String (SIZE (0..6))                 |
| x.2.7.2.2.0 | Voltage2Max    | read-write | Voltage2 alarm range (max. value) | String (SIZE (0..6))                 |
| x.2.7.2.3.0 | Voltage2Hyst   | read-write | Voltage2 hysteresis               | String (SIZE (0..6))                 |
| x.2.7.2.4.0 | Voltage2Action | read-write | Voltage2 action                   | INTEGER {SEND_MAIL(1),NO_ACTION(0) } |
| x.2.7.2.5.0 | Voltage2Range  | read-write | Voltage2 input range              | INTEGER { 0_5V(0), 0_100V(1) }       |

## 9.12 Setup -> digitalinput

| OID       | Name                | Access     | Description           | Syntax  |
|-----------|---------------------|------------|-----------------------|---|
| x.2.8.1.0 | digitalinput1Action | read-write | Digital Input1 action | INTEGER { MAIL_IF_RISING(2), MAIL_IF_FALLING(1), NO_ACTION(0) } |
| x.2.8.2.0 | digitalinput2Action | read-write | Digital Input2 action | INTEGER { MAIL_IF_RISING(2), MAIL_IF_FALLING(1), NO_ACTION(0) } |

## 9.13 Setup -> relay

| OID       | Name               | Access     | Description                   | Syntax  |
|-----------|--------------------|------------|-------------------------------|---|
| x.2.9.1.0 | relay1ControlledBy | read-write | Relay1 control item           | INTEGER { DIGITAL_INPUT2(8), ANALOG_INPUT2(7), HUMIDITY2(6), TEMPERATURE2(5), DIGITAL_INPUT1(4), ANALOG_INPUT1(3), HUMIDITY1(2), TEMPERATURE1(1), MANUAL(0) } |
| x.2.9.2.0 | relay2ControlledBy | read-write | Relay2 control item           | INTEGER { DIGITAL_INPUT2(8), ANALOG_INPUT2(7), HUMIDITY2(6), TEMPERATURE2(5), DIGITAL_INPUT1(4), ANALOG_INPUT1(3), HUMIDITY1(2), TEMPERATURE1(1), MANUAL(0) } |
| x.2.9.3.0 | relayPulseWidth    | read-write | Digital Inputs mail recipient | INTEGER{ 0..255 }   |

## 9.14 Setup -> recipients

| OID        | Name                   | Access     | Description       | Syntax                |
|------------|------------------------|------------|-------------------|-----------------------|
| x.2.10.1.0 | recipient1EmailAddress | read-write | Recipient1 e-mail | String (SIZE (0..38)) |


## 9.15 Monitor&control

| OID      | Name               | Access     | Description                        | Syntax                            |
|----------|--------------------|------------|------------------------------------|-----------------------------------|
| x.3.1.0  | digitalInput1State | read-only  | Digital Input1 state               | INTEGER { ON(1), OFF(0) }         |
| x.3.2.0  | digitalInput2State | read-only  | Digital Input2 state               | INTEGER { ON(1), OFF(0) }         |
| x.3.3.0  | relay1State        | read-write | Relay1 state                       | INTEGER { ON(1), OFF(0) }         |
| x.3.4.0  | relay1Pulse        | read-write | Relay1 pulse                       | INTEGER { ON(1), OFF(0) }         |
| x.3.5.0  | relay2State        | read-write | Relay2 state                       | INTEGER { ON(1), OFF(0) }         |
| x.3.6.0  | relay2Pulse        | read-write | Relay2 pulse                       | INTEGER { ON(1), OFF(0) }         |
| x.3.7.0  | voltage1x10Int     | read-only  | Voltage1 x10 in integer format     | INTEGER{ 0..65000 }               |
| x.3.8.0  | voltage2x10Int     | read-only  | Voltage2 x10 in integer format     | INTEGER{ 0..65000 }               |
| x.3.9.0  | temp1x10Int        | read-only  | Temperature1 x10 in integer format | INTEGER{ -400..1750 }             |
| x.3.10.0 | temp2x10Int        | read-only  | Temperature2 x10 in integer format | INTEGER{ -400..1750 }             |
| x.3.11.0 | humi1x10Int        | read-only  | Humidity1 x10 in integer format    | INTEGER{ 0..65000 }               |
| x.3.12.0 | humi2x10Int        | read-only  | Humidity2 x10 in integer format    | INTEGER{ 0..65000 }               |
| x.3.13.0 | configurationSaved | read-write | Configuration save status          | INTEGER { SAVED(1), UNSAVED(0) }  |
| x.3.14.0 | restartDevice      | read-write | Restart device                     | INTEGER { RESTART(1), CANCEL(0) } |

## 10. Restoring factory default settings

If the IP address or password is forgotten, **TCW121** can be restored to its original factory default settings. To do this, please follow the steps below:

- Turn off the power supply;
- Press and hold the RESET button then turn on the power supply;
- The LED's STS and LOG will flash 14 times, after that they will turn on. In this moment the RESET button should be released.

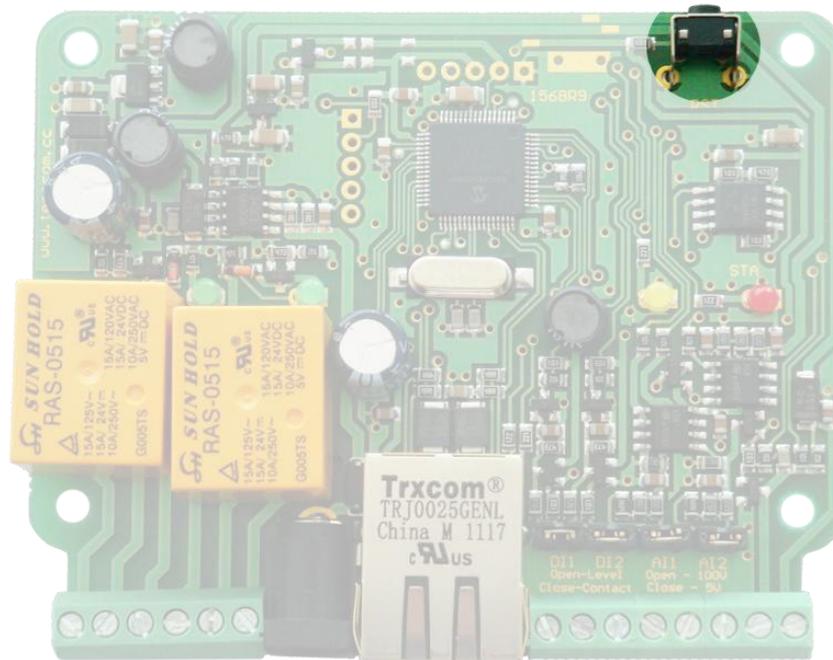

The factory default settings are:

|                   |               |
|-------------------|---------------|
| User Name (Admin) | admin         |
| Password (Admin)  | admin         |
| IP Address        | 192.168.1.2   |
| Subnet Mask       | 255.255.255.0 |
| Default Gateway   | 192.168.1.1   |
| SNMPConfiguration | disabled      |
| readCommunity     | public        |
| writeCommunity    | private       |

## 11. Firmware update

**TCW121** supports remote firmware update. To update the device follow the steps below:

- Download the TCW1XX\_Update\_Tool from [www.teracom.cc](http://www.teracom.cc);
- Download the latest firmware version file (\*.cod) from [www.teracom.cc](http://www.teracom.cc);
- Start the program and upload the new firmware.

**Attention! Don't turn off the power supply during the update. Turning off the power supply will damage the device.**